






















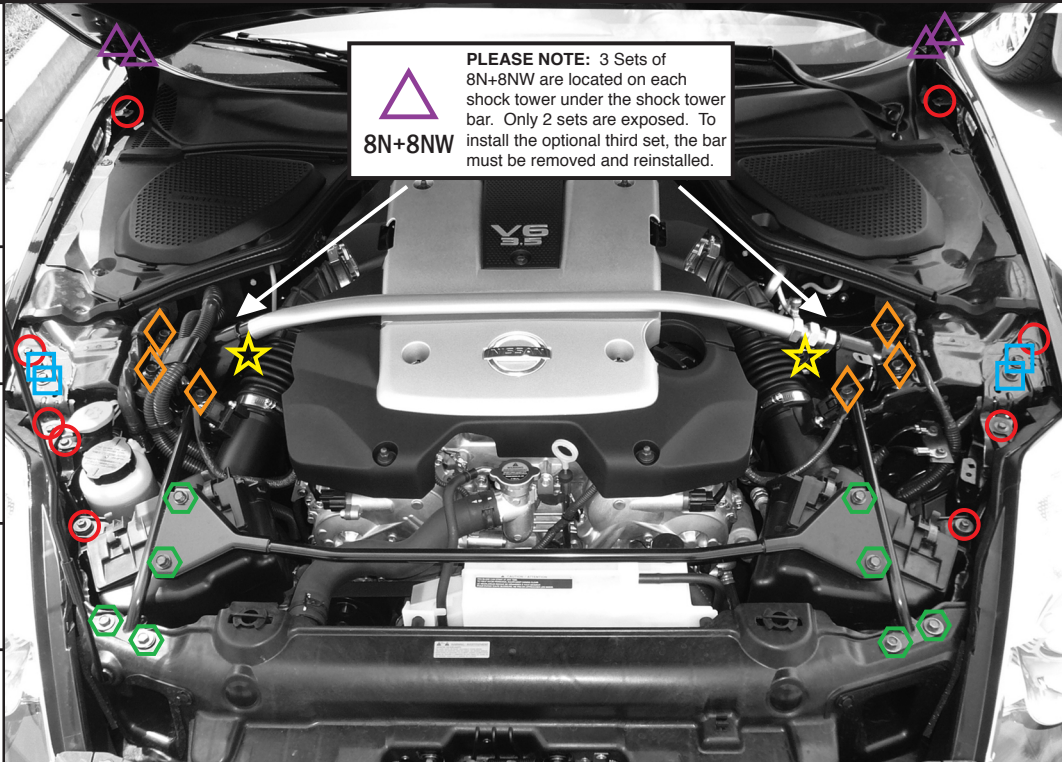
























KIT CONTENTS: (illustrations not to scale)


 - fitment guide - care instructions - sticker	9 x 6B 	9 x 6BW  	4 x 8B 	4 x 8BW  	8 x 8S 	8 x 8SW  
6 x 10S 	6 x 10SW  	10 x 8N  	10 x 8NW  	2 x 10N  	2 x 10NW  	

APPLICATION GUIDE:

 6B = 	 <p>PLEASE NOTE: 3 Sets of 8N+8NW are located on each shock tower under the shock tower bar. Only 2 sets are exposed. To install the optional third set, the bar must be removed and reinstalled.</p>
 6BW = 	
 8B = 	
 8BW = 	
 8S = 	
 8SW = 	
 10S = 	
 10SW = 	
 8N = 	
 8NW = 	
 10N = 	
 10NW = 	

TOOLS YOU'LL NEED:

NOTES:

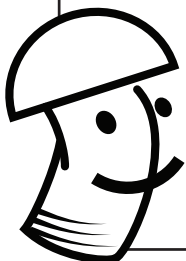

4mm allen wrench
5mm allen wrench
10, 12, 13, 14, 17mm
socket wrench

- * do not under or over tighten, refer to manufacturer suggested torque specifications. see your car's service manual for details.
- * replace hood / hood latch bolts one at a time to avoid misalignment.
- * follow care instructions to keep your kit looking new.
- * use additional Gallery Universal Kits to dress your car up even more!
- * all Gallery parts are hand made in the USA of the highest quality materials.
- * need help? questions can be sent to inquiry@galleryfresh.com